

**Product Data**

| Electrical Data            |  | SGT (Transmitter) | SGR (Receiver) |
|----------------------------|--|-------------------|----------------|
| Supply voltage             |  | 12 – 36 Vdc       |                |
| Current consumption        |  | 100 mA            | 50 mA          |
| Max. output load           |  | -                 | 200 mA         |
| Reverse polarity protected |  | Yes               |                |
| Short circuit protected    |  | -                 | Yes            |


| Environmental Data            |                                             |
|-------------------------------|---------------------------------------------|
| Light immunity @ 5° incidence | > 100.000 lux                               |
| Temperature, operation        | -20 to + 65 °C                              |
| Sealing class                 | "A" & "B" housing IP 54 - "C" housing IP 67 |
| Approvals                     | CE                                          |

| Available Models         |                             |                   |                |                                                          |
|--------------------------|-----------------------------|-------------------|----------------|----------------------------------------------------------|
|                          | Model                       | Output            | Output Mode    | Sensing Range                                            |
| Transmitter              | SGT 1(H)-xxx-0xx-x1-x-0x-xx | -                 | -              | 0 – 4m.<br>(slim line)<br><br>0 – 3 m.<br>(leading edge) |
|                          | SGR 1-xxx-0xx-x1-x-00-xx    | NPN               | Light operated |                                                          |
| SGR 1-xxx-0xx-x1-x-01-xx | Dark operated               |                   |                |                                                          |
| Receiver                 | SGR 1-xxx-0xx-x1-x-02-xx    | PNP               | Light operated |                                                          |
|                          | SGR 1-xxx-0xx-x1-x-03-xx    |                   | Dark operated  |                                                          |
|                          | SGR 1-xxx-0xx-x1-x-04-xx    | Solid State Relay | Dark operated  |                                                          |
|                          | SGR 1-xxx-0xx-x1-x-05-xx    | Light operated    |                |                                                          |


Note: The high power transmitter, model SGT 1H-xxx-0xx-x1-x-0x-xx has a sensing range of 0,5 to 6,5m.

**Connection**

| Wiring Diagrams             |                             |                          |                             |
|-----------------------------|-----------------------------|--------------------------|-----------------------------|
| Model                       | Black wire connected to (-) | Black wire not connected | Black wire connected to (+) |
| SGT 1(H)-xxx-0xx-x1-x-00-xx | TX is not transmitting      | TX is transmitting       | TX is transmitting          |
| SGT 1(H)-xxx-0xx-x1-x-01-xx | TX is not transmitting      | TX is transmitting       | TX is not transmitting      |
| SGT 1(H)-xxx-0xx-x1-x-02-xx | TX is transmitting          | TX is not transmitting   | TX is transmitting          |
| SGT 1(H)-xxx-0xx-x1-x-03-xx | TX is transmitting          | TX is transmitting       | TX is not transmitting      |

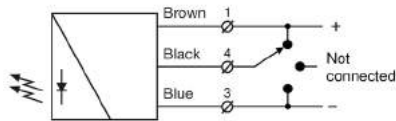


Transmitter SGT

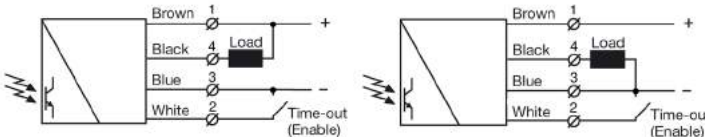

Receiver SGR NPN output

Receiver SGR PNP output

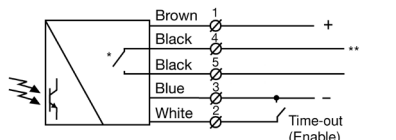

\* Relay type: Open when SGR not powered \*\* Max. 24 V ac / 36 V dc

Receiver SGR Solid State Relay output

**Installation & Adjustments**

| Output Logic |                |               |                               |
|--------------|----------------|---------------|-------------------------------|
| Detection    | Output mode    | Output status | Output indicator (yellow led) |
| Present      | Dark operated  | Closed        | On                            |
|              | Light operated | Open          | Off                           |
| Absent       | Dark operated  | Open          | Off                           |
|              | Light operated | Closed        | On                            |

**Adjustment**

- On the SG1 no initial set up or adjustments are required, due the automatic signal-tracking (AST) feature, that adjusts automatically each individual beam on the system.
- Mount the transmitter (SGT) and receiver (SGR) facing each other and correctly aligned.
  - Wire the sensor according to the wiring diagram. Make sure the load does not exceed 200 mA.
  - Check for correct wiring before turning power on. Select time-out function if required.
  - When the power on indicator (green LEDs) are on, the system is operating.
    - If the Status indicator (red LED) is constant on the SGR cannot see the SGT.
    - If the Status indicator (red LED) is flashing slowly one or more beams are blocked (only if time-out is enabled).
- Note: In dynamic installations:  
- For initial setup, ensure that the doors where the light curtains are installed, are in the fully open position.  
- In order to prevent vandalism Telco recommends that the detectors are placed at least 5 mm in the door.


**Time-out function**

On "A1" model (46 mm channel spacing), up to 4 non-adjacent channels can be ignored with time-out function enabled, when obstructed for more than 10 seconds.  
On "B1" model (92 mm channel spacing), up to 2 non-adjacent channels can be ignored with time-out function enabled, when obstructed for more than 10 seconds.  
This function can be enabled (White wire disconnected) or disabled (White wire connected).

**Test Input** SGT 1

The transmitter can be externally disabled and enabled, via the control wire, for test purposes. Make sure no object is present in the detection area when transmitter is disabled for test. When the transmitter is disabled, the receiver will change output.

**Indicators**

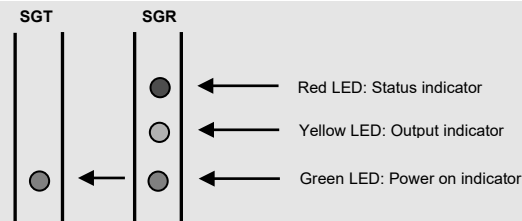

**Troubleshooting**

| Probable Reason                                                                                                                         | Corrective Action                                             |
|-----------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------|
| 1. Symptom: Output changes when doors are closing.                                                                                      |                                                               |
| Misaligned detectors.                                                                                                                   | Align detectors.                                              |
| The doors are vibrating when closing.                                                                                                   | Place the detectors further apart from each other.            |
| 2. Symptom: Status indicator (Red LED) is constant on.                                                                                  |                                                               |
| TX is not emitting.                                                                                                                     | Check supply and cable to the SGT.                            |
| SGT is disabled.                                                                                                                        | Enable the SGT.                                               |
| The upper channel is blocked.                                                                                                           | Remove obstruction.                                           |
| 2a. For "A1" models (46 mm channel spacing).                                                                                            |                                                               |
| More than 4 channels blocked.                                                                                                           | Remove obstruction.                                           |
| 2b. For "B1" models (92 mm channel spacing).                                                                                            |                                                               |
| More than 2 channels are blocked.                                                                                                       | Remove obstruction.                                           |
| 3. Symptom: Status indicator (Red LED) is flashing but correct function of light curtain.                                               |                                                               |
| 3a. On "A1" model (46 mm channel spacing), up to four non-adjacent channels have been blocked or damaged (time-out function activated). | Remove obstruction or prepare to replace the faulty detector. |
| 3b. On "B1" model (92 mm channel spacing), up to two non-adjacent channels have been blocked or damaged (time-out function activated).  | Remove obstruction or prepare to replace the faulty detector. |
| 4. Symptom: Status indicator (Red LED) is flashing and output is not working.                                                           |                                                               |
| Two adjacent channels are blocked.                                                                                                      | Remove obstruction or replace detectors.                      |
| Lower channel blocked                                                                                                                   |                                                               |
| 5. Symptom: Output indicator (Yellow LED) is flashing                                                                                   |                                                               |
| Severe electrical interference.                                                                                                         | Remove SGR and SGT supply cable from high voltage cables.     |
| Severe ambient light.                                                                                                                   | Change position of SGT and SGR.                               |
| Cross talk from another light curtain.                                                                                                  | Change position of SGT and SGR.                               |





**Warning**  
This device is not to be used for Personnel Protection in Machine Guarding Safety applications. This device does not include the self-checking redundant circuitry necessary to allow its use in personnel machine guarding stand-alone safety applications.

**Dimensions and Descriptions**

Slim Line "A" Housing – IP 54



**Details**

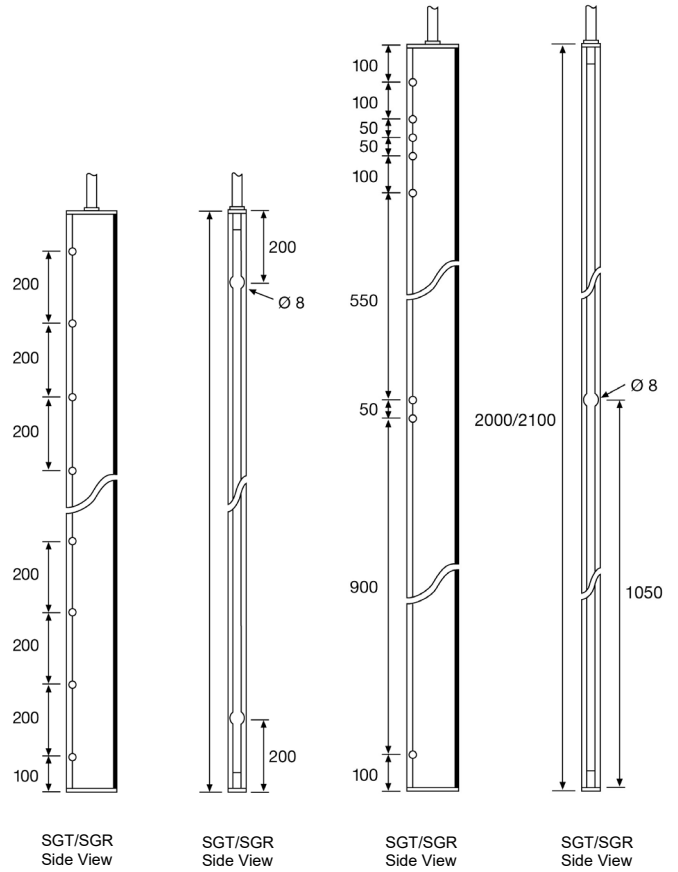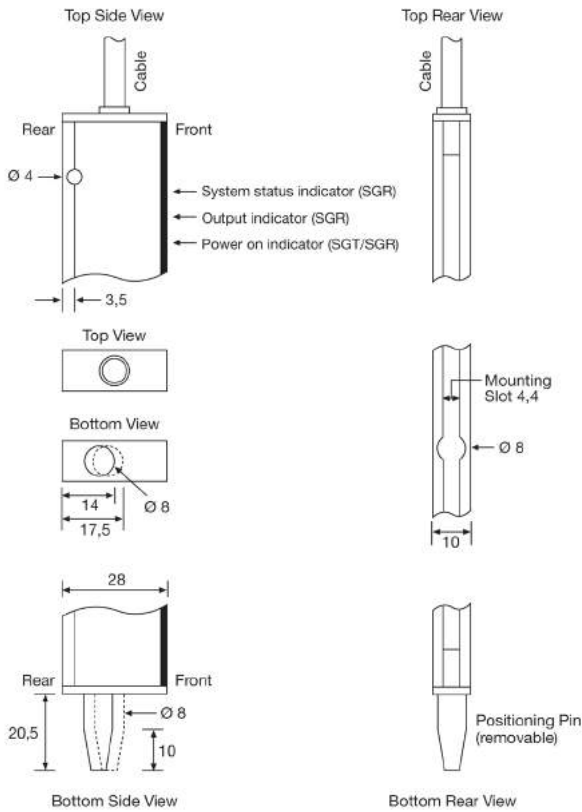

SG 1 085/125/160

SG 1 200

Leading Edge "B" Housing – IP 54

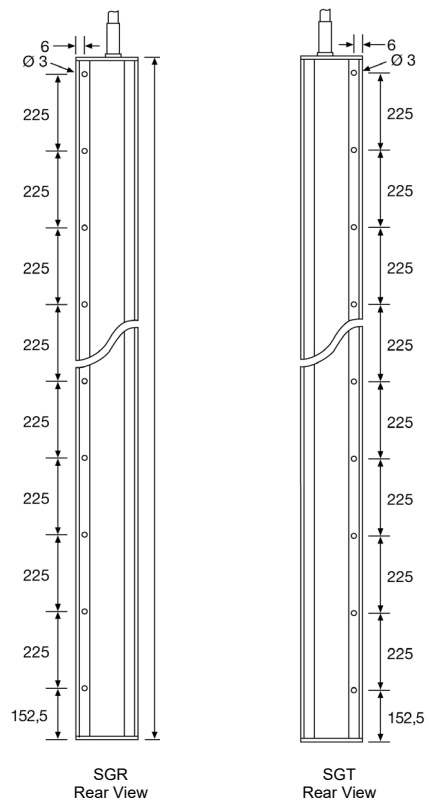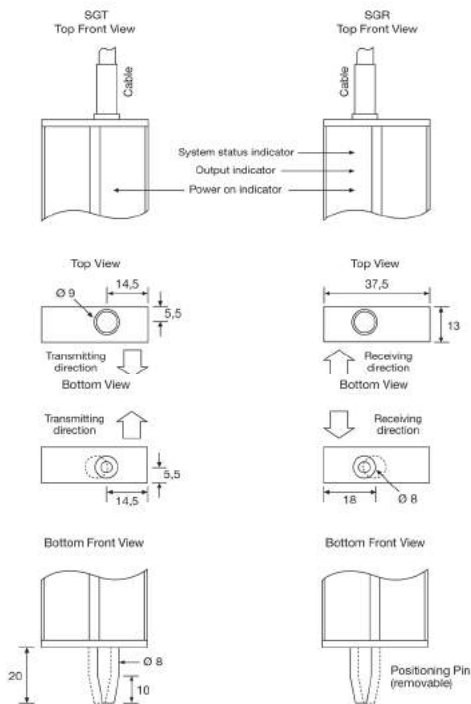

SGR Rear View

SGT Rear View




**Warning**

This device is not to be used for Personnel Protection in Machine Guarding Safety applications. This device does not include the self-checking redundant circuitry necessary to allow its use in personnel machine guarding stand-alone safety applications.


Dimensions and Descriptions

Slim Line "C" Housing – IP 67

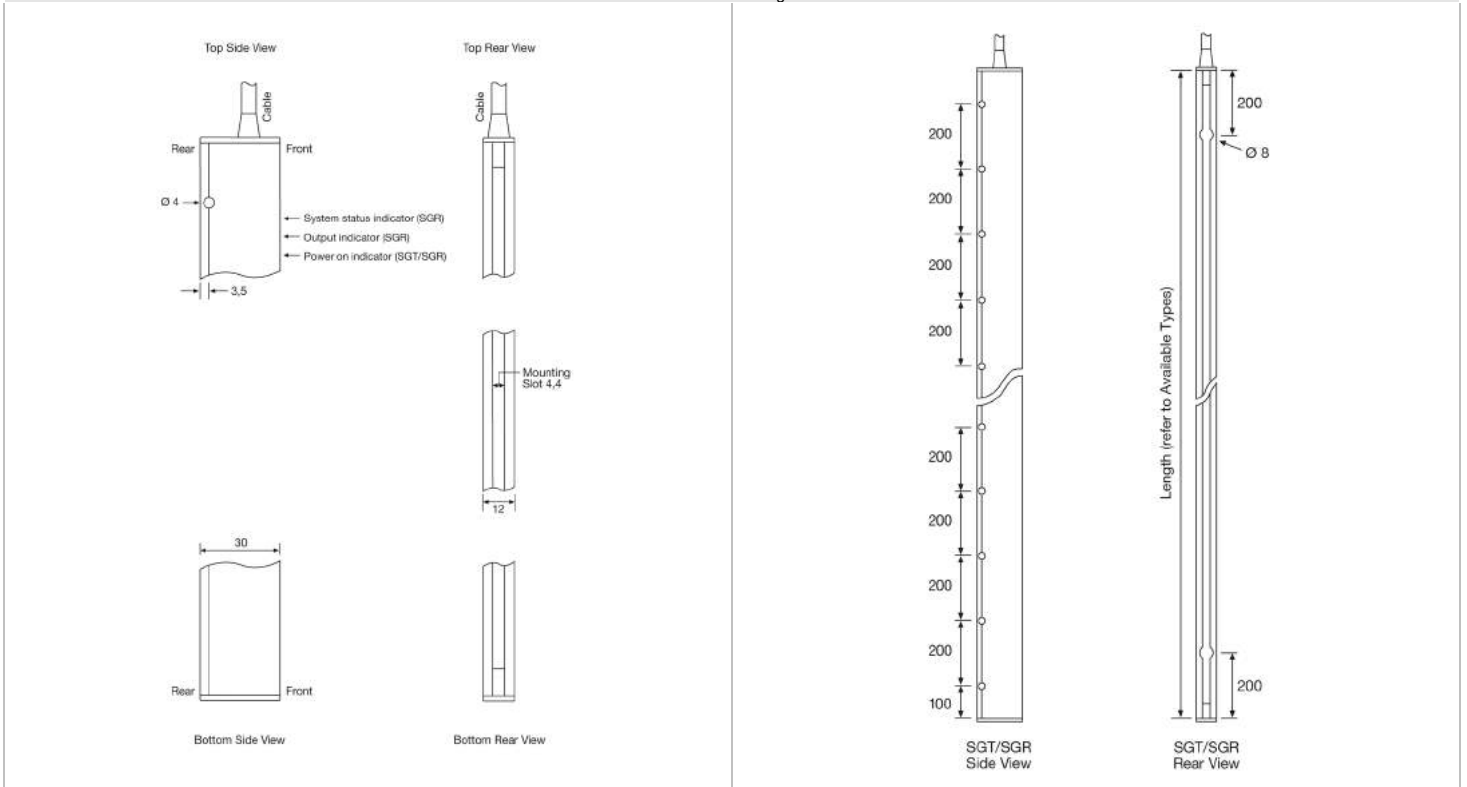


Recommendations for elevator installations

Fig. 1

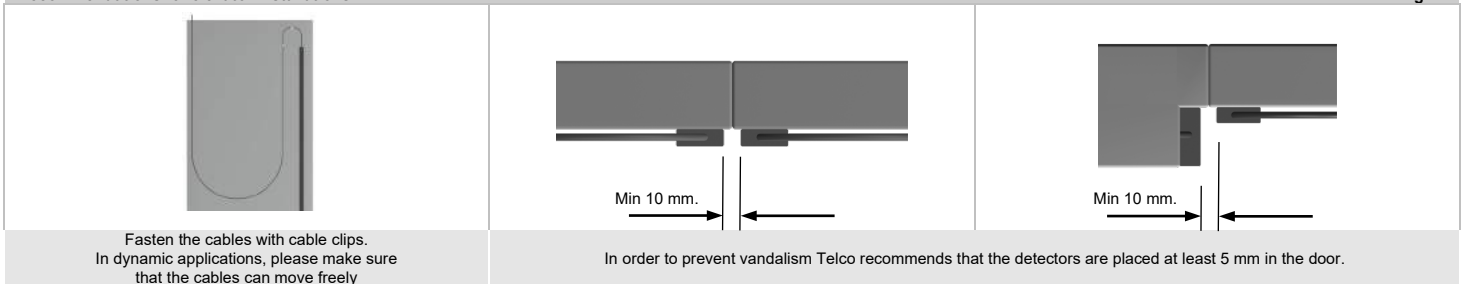

Position of Channels & Channel spacing


46 mm channel spacing  
(Drawing of 2000 mm housing length, 40 channels model)

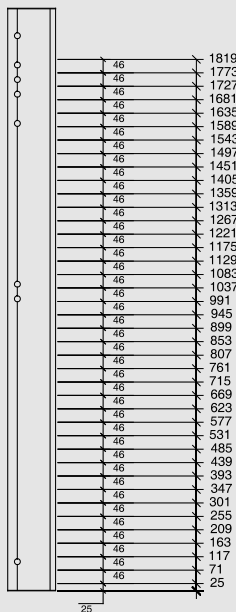

Housing Length & Number of Channels

| Housing Length | Active height | Number of Channels | Channel Spacing |
|----------------|---------------|--------------------|-----------------|
| 850 mm         | 669 mm        | 8                  | 92 mm           |
|                | 715 mm        | 16                 | 46 mm           |
| 1250 mm        | 1037 mm       | 12                 | 92 mm           |
|                | 1083 mm       | 24                 | 46 mm           |
| 1600 mm        | 1405 mm       | 16                 | 92 mm           |
|                | 1451 mm       | 32                 | 46 mm           |
| 2000 mm        | 1773 mm       | 20                 | 92 mm           |
|                | 1819 mm       | 40                 | 46 mm           |

92 mm channel spacing  
(Drawing of 2000 mm housing length, 20 channels mode)

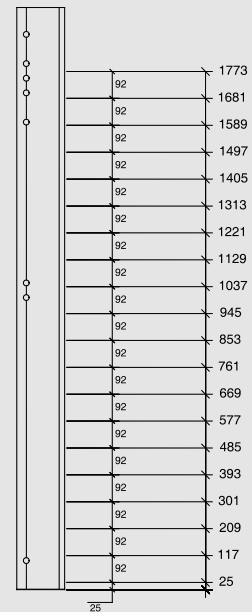

To determine the position of channels on each different model, use this table and refer to fig. 2 & 3. Channel n° 1 at the bottom.

Um die Position der Kanäle auf jedem der unterschiedlichen Modelle festzustellen, benutzen Sie diese Tabelle und beziehen Sie sich auf Bild 2 u.3. Kanal N°1 befindet sich unten.

Pour déterminer la position des canaux sur chaque modèle différent, utilisez cette table et référez-vous à fig. 2 et 3. Canal n° 1 au fond.

Para determinar la posición de los canales en cada modelo, utilice esta tabla y véase fig. 2 y 3. El canal n° 1 está situado en la parte inferior.

Fig. 2

Fig. 3



Warning

This device is not to be used for Personnel Protection in Machine Guarding Safety applications. This device does not include the self-checking redundant circuitry necessary to allow its use in personnel machine guarding stand-alone safety applications.