

Product Data


| Electrical Data | |
|----------------------------|------------------|
| Supply Voltage | 10 – 30 V dc |
| Voltage ripple | +/- 15% |
| Current consumption | 30 mA |
| Max. output load | 200 mA / 30 V dc |
| Reverse polarity protected | Yes |
| Short circuit protected | Yes |

| Environmental Data | |
|------------------------|---------------|
| Temperature, operation | -20 to +60 °C |
| Sealing class | IP 67 |
| Approvals | CE |

| Available Models | | | | | |
|-------------------|------------------|----------------|-------------|-------------|--------------------|
| | Model | Supply Voltage | Output | Output Mode | Sensing Range |
| Diffuse Proximity | SMP 7400 IO xx x | 10-30 V dc | IO-Link/NPN | Light/dark | 50 cm, adjustable* |
| | SMP 7500 IO xx x | | IO-Link/PNP | | |
| | SMP 7401 IO xx x | | IO-Link/NPN | | 1 m adjustable* |
| | SMP 7501 IO xx x | | IO-Link/PNP | | |


* Note: Measured against matt white A4 paper.

Illustration

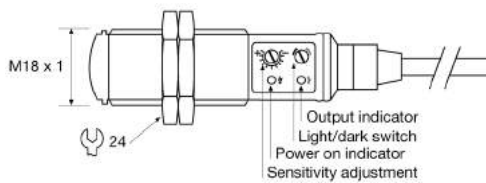


Connection

Wiring Diagrams

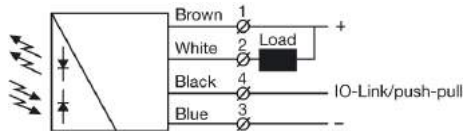

SMP 740x IO Load as NPN

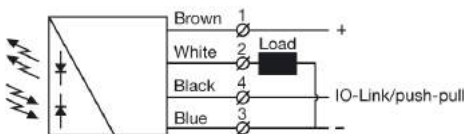

SMP 750x IO Load as PNP

Connection Pins

| | 4 pin, M8 plug | 4 pin, M12 plug |
|----------------|----------------|-----------------|
| Supply + | Brown Pin 1 | Pin 1 |
| Supply - | Blue Pin 3 | Pin 3 |
| IO-Link | Black Pin 4 | Pin 4 |
| Control/Output | White Pin 2 | Pin 2 |



Mounting & Installation

| Mounting & Installation | |
|-------------------------|--|
| 1 | Position the sensor pointing at the target object. |
| 2 | Align by moving sensor horizontally and vertically until the output changes when the target object is present (refer to Output Logic table). |
| 3 | Fasten the sensor securely using the enclosed locking nuts and/or a mounting bracket. Avoid acute angles on cable close to sensor. |

Adjustments

General
 Sensitivity and output mode can be adjusted using the potentiometers or with the IO-Link. The IO-Link allows the user to setup and read several functions and parameters. Please refer to "SMP and PC connection" on the following page.

Output Mode Selection

The output mode can be selected via an integral light/dark switch, or via IO-Link. Refer to Output Logic table for output mode reference. Note that the NPN output is closed when IO-Link/push-pull is low and the yellow output LED is off.

| | | |
|-----------------------|--|---|
| Light Operated (N.O.) | Enables the output to be active when there is an object present. | Turn switch to full clockwise position, or set: - Overwrite light operated = true - Light operated = true in the Parameters tab. |
| Dark Operated (N.C.) | Enables the output to be inactive when there is an object present. | Turn switch to full counter clockwise position, or set: - Overwrite light operated = true - Light operated = false in the Parameters tab. |

Output Logic

| Detection | Output mode | Output status | | | Yellow LED |
|--------------------|-----------------------|---------------|--------|--------|------------|
| | | IO-Link | PNP | NPN | |
| Object present | Dark operated (N.C.) | Low | Open | Closed | Off |
| | Light operated (N.O.) | High | Closed | Open | On |
| Object absent | Dark operated (N.C.) | High | Closed | Open | On |
| | Light operated (N.O.) | Low | Open | Closed | Off |

Sensitivity Adjustment

Maximum sensitivity can be used for most applications and is advised for applications with contaminated environments. The sensitivity can be adjusted on the potentiometer (factory default active) or via IO-Link.

Sensitivity adjustment may be required in applications where objects to be detected have highly reflective, dark or textured surfaces and/or applications where a background is present. This can be achieved manually or via IO-Link.

For sensitivity adjustment, proceed with the following steps:



| | |
|----|--|
| 1 | Start with the sensitivity at minimum by turning the potentiometer to full counter clockwise position. |
| 2 | Select target object with the smallest dimensions and least reflective surface. |
| 3 | Place target object in front of sensor. |
| 4 | <i>Via potentiometer:</i> Increase the sensitivity by turning the potentiometer clockwise until the target object is detected and the output status changes (Position 1) <i>Via IO-Link:</i> Press the System Command Teach gain button in the parameter tab. This will adjust and determinate the best sensitivity level, independently of the predefined gain. If the output has not changed, attempt to move sensor closer to target object and repeat procedure. |
| 5 | If there is a background proceed to step 7. If there is no background proceed to step 6. |
| 6 | Turn the potentiometer clockwise to a position midway between Position 1 and maximum clockwise position. |
| 7 | Remove target object. If the output changes, proceed to step 8. If the output has not changed, a background is detected. Proceed to step 10 |
| 8 | Turn the potentiometer clockwise until the output status changed (Position 2). A background is now detected. |
| 9 | Turn the potentiometer counter clockwise to a position midway between Position 1 and Position 2. |
| 10 | If the background is still detected and the output has not changed, attempt to angle the sensor in relation to the plane of the background. Then repeat procedure from step 1. |



Warning
 This device is not to be used for Personnel Protection in Machine Guarding Safety applications. This device does not include the self-checking redundant circuitry necessary to allow its use in personnel machine guarding stand-alone safety applications.

SMP and PC connection

To setup or adjust a SMP, it is required to use TMG IO-Link Device Tool together with TMG-USB IO-Link Master, or another IO-Link PC application.

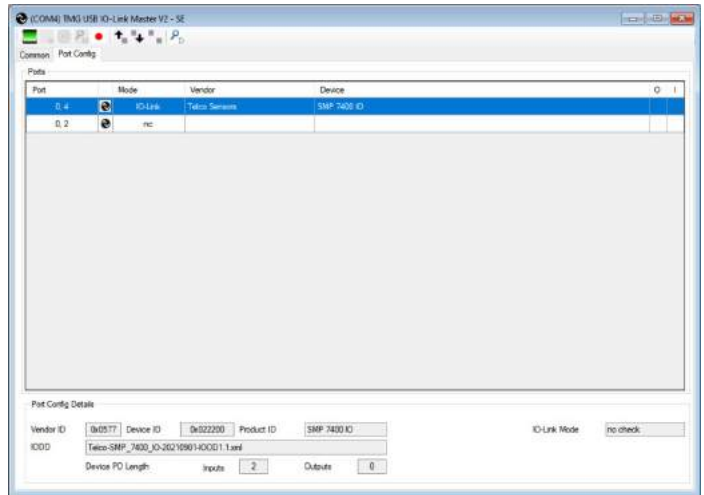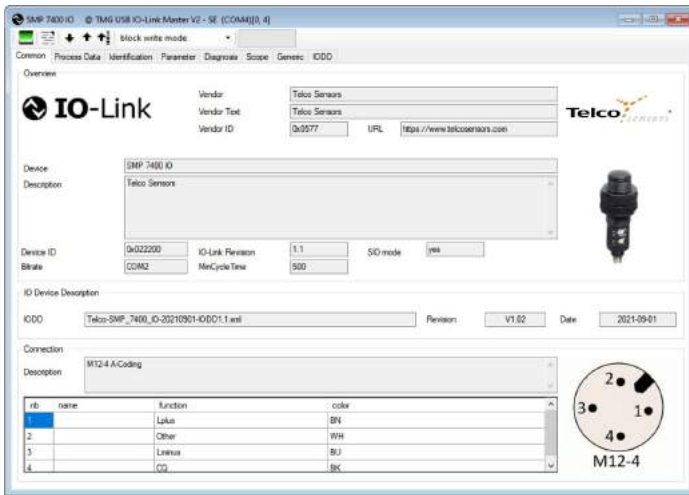

How to connect

Connect the TMG-USB IO-Link Master USB-adapter to the USB-port of the PC and to the cable of the SMP.

Download the IO-Link Device Tool software and the SMP-IODD file from the Telco Sensors website in <https://www.telcosensors.com/downloads> selecting Software in Document type section. Install the TMG IO-Link Device Tool V5.1.1-5122 SE – Setup file and run the program.

Import the SMP-IODD by selecting "Import IODD" in the Options menu, previously downloaded.

Click on "Search Master" and select the Master in the popup window.

Click on "Go Online"




Click on "Check Devices"

Click on "Takeover devices into engineering" to the SMP device. Double click on the row with the SMP, to open the Device menu.

Click on "Upload from Device" to upload the SMP settings.

For more information see TMG's User Manual for the IO-Link Device Tool.

Popup windows:

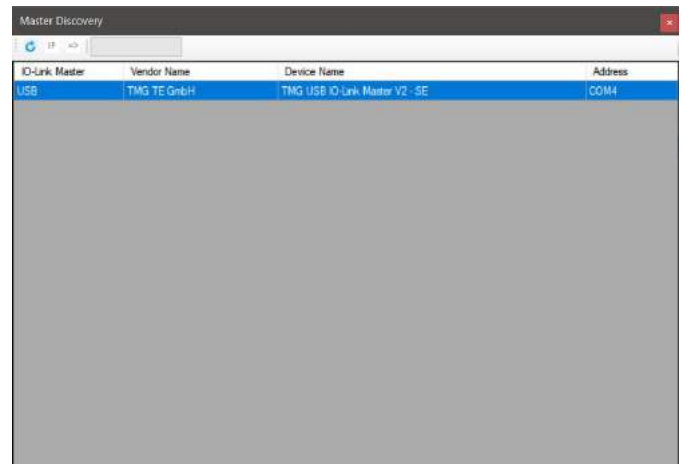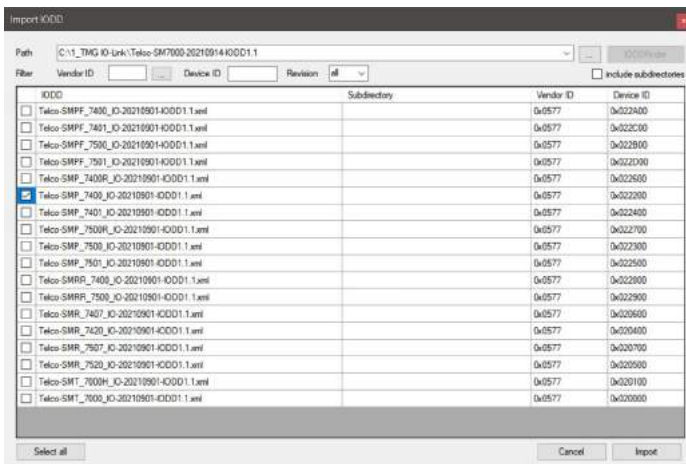

Parameters

On the Parameter tab, the parameters of the sensor can be set up or modified.

General settings SMP:

| Name | R/W | Value | State | Unit |
|----------------------------|-----|--------------------------|-------|------|
| System Command | wo | Restore Factory Settings | d | |
| System Command | wo | Teach gain | d | |
| Hysteresis | rw | 5 | d | % |
| Gain input | rw | Potentiometer | d | |
| Gain value | rw | 0 | d | |
| Light/Dark operated input | rw | Potentiometer | d | |
| Light operated | rw | false | d | |
| On delay | rw | 0,00 | d | s |
| Off delay | rw | 0,00 | d | s |
| Oneshot time | rw | 0,00 | d | s |
| Forced output | rw | false | d | |
| Forced value | rw | false | d | |
| Operating hours event time | rw | 0 | d | h |

System Command - Restore Factory Settings
Restores all user-settings to default values.

System Command – Teach Gain
Determines the lowest possible gain to turn on.

Hysteresis
The relative difference between on and off threshold. In both IO-Link and Potentiometer gain input it is possible to set the Hysteresis level. It can be set from 0 to 10%.

Gain input
Select how the gain should be controlled. Select between Potentiometer or IO-Link. IO-Link is set by the Gain value setting. Keep objects out of the detection area when switching to automatic gain mode, because the initial setting of the beam requires information about signal strength for an unbroken beam. Excess gain is adjusted to about 2.

Gain value
Select a fixed gain when IO-Link is selected for Gain input. It can be set from 0 to 255.

Light/Dark operated input.
How the light/dark operated should be determined. Select between Potentiometer or IO-Link. IO-Link is set by the "Light operated" value setting. Potentiometer is set by the potentiometer on the sensor.

Light operated
Select between true or false.
Changing the selection will invert the outputs, if the Overwrite light operated is true.

On delay
Select the delay of the output when an object appears, i.e. becomes present. It can be set from 0,00 to 600,00 seconds.

Off delay
Select delay of the output when an object disappears, i.e. becomes absent. It can be set from 0,00 to 600,00 seconds.

Oneshot time
Select how long time the outputs will be active when going from not active to active. It can be set from 0,00 to 600,00 seconds.

Forced output.
Select if the output should be forced to the value in Forced value or decided from the sensor input.

Forced value
Select the output state if the Forced output is true.

Operating Hours Event Time
Starts an event message when operating hours reaches the value. It can be set from 0 to 4294967295. If 0 is selected there will be no operating hours event.



Warning
This device is not to be used for Personnel Protection in Machine Guarding Safety applications. This device does not include the self-checking redundant circuitry necessary to allow its use in personnel machine guarding stand-alone safety applications.

Process Data

Process data SMP:

| Name | Value | Unit |
|-------------------------|-------|------|
| [-] Process data inputs | | |
| Output | false | |
| Light operated | true | |
| Gain | 28 | |

Output
 Status on the output.

Light Operated
 Status on the light operated selection.

Gain
 Status on the gain value.

Identification

On the identification tab, general information about the sensor is displayed.

| Name | R/W | Value | State | Unit |
|--------------------------|-----|---|-------|------|
| Vendor Name | ro | Telco Sensors | d | |
| Vendor Text | ro | https://www.telcosensors.com | d | |
| Product Name | ro | SMP 7400 IO | d | |
| Product Text | ro | Telco Sensors | d | |
| Firmware Revision | ro | SMP 7400 IO v1.00 | d | |
| Function Tag | rw | | d | |
| Location Tag | rw | | d | |
| Application-specific Tag | rw | *** | d | |
| Production year | ro | 21 | d | |
| Production month | ro | 8 | d | |

Function Tag, Location Tag and Application-specific Tag
 Enter user specific descriptions for identification.



Warning
 This device is not to be used for Personnel Protection in Machine Guarding Safety applications. This device does not include the self-checking redundant circuitry necessary to allow its use in personnel machine guarding stand-alone safety applications.